

vacuum relief valve

valve that limits the vacuum level in a vacuum cargo tank (or suction line) to a preset level by allowing air to enter, thereby assuring that the operating vacuum level is not exceeded.